

Dingo

(Guide only)

BEFORE STARTING

1. Persons using this machine must be a licensed or competent experienced operator.
2. Read and understand the hazard assessment sheet.
3. Ensure area is suitable for dingo operation and no bystanders are present.

TO START THE ENGINE

1. Set the throttle to the half throttle position.
2. If engine is cold, position the choke lever in the 'on' position.
3. Turn the key to the start position and release it when the engine starts.
4. Once engine is running, turn the choke off.
5. Run the dingo at full RPM when operating.

TO STOP THE ENGINE

1. Pull the throttle fully backward to decrease the engine RPM.
2. Turn the key switch to the "OFF" position.

WARNING

Before you leave the operating platform:

1. Park machine on level ground
2. Lower the lift arms, put attachment flat on the ground.
3. Stop the engine.

OPERATING PROCEDURE

Persons operating the Dingo must be a trained or competent experienced operator.

ATTACHMENTS

To attach attachment:

1. Remove bucket
2. Attach the attachment and connect hoses, ensuring no dirt or debris is in / around hydraulic hose fittings.
3. Attachment hydraulic flow strength can be increased by adjusting level on top of dingo.

SPECIFICATIONS

Safe working load	250kg
Weight	750kg
Fuel	Unleaded - four stroke

TRAILER / TYING DOWN

The dingo must be secured to the trailer before moving.

When reversing with the trailer, the reversing latch located at the front of the trailer needs to be in the reverse position.

TROUBLESHOOTING	
Problem	Possible solution

Do not under any circumstances attempt any repairs. Please call your local Hiredepot branch for assistance.

This operating and safety brochure is intended as a guide only for the safe operation of this equipment. It does not override license requirements nor is it a substitute for structured operating lesson. If you are unsure about any aspect of the equipment, its capabilities or the correct usage, please call our trained staff for instruction or any questions you may have regarding the safe operation of this equipment.