

Pipe camera NEED TO KNOW

Please read before using the machine

DON'T COST YOURSELF MORE \$\$\$

To ensure you do not cause damage to the machine and cost yourself more money than you need to, please ensure you take note of the guidelines below.

DO NOT:	REASON WHY:
Push too hard when threading the camera into your drain/pipe	The fibre optic cable will kink under the pressure and then need to be replaced
Pull the camera/cable out excessively quickly	The fibre optic cable may kink under the force, or the camera can catch on a snag and break/incur damage at the join, in which case the camera and/or cable will need to be replaced
Overtighten screws on the skid	Crushing damage may occur on the camera
Run a jetter/pressure washer in the drain while the camera is still in the drain	High pressure water can infiltrate and damage the camera
Run a sewer snake in the drain while the camera/cable is still in the drain	Damage will occur to the camera or fibre optic cable
Run the camera into/through obstacles or blockages	Camera lens can crack or break
Do not allow the control box, screen or charger to enter water	These components are not waterproof and may suffer damage exposed to excessive water

PLEASE NOTE

If you are unsure about any of the operating procedures, please contact your local Hiredepot branch.